Honeywell

3800 Linear Series


快速入门指南

注： 有关清洁设备的信息，请参阅用户指南。


入门

连接扫描器之前请关闭计算机电源，然后在扫描器完全连接后打开计算机电源。


USB 连接

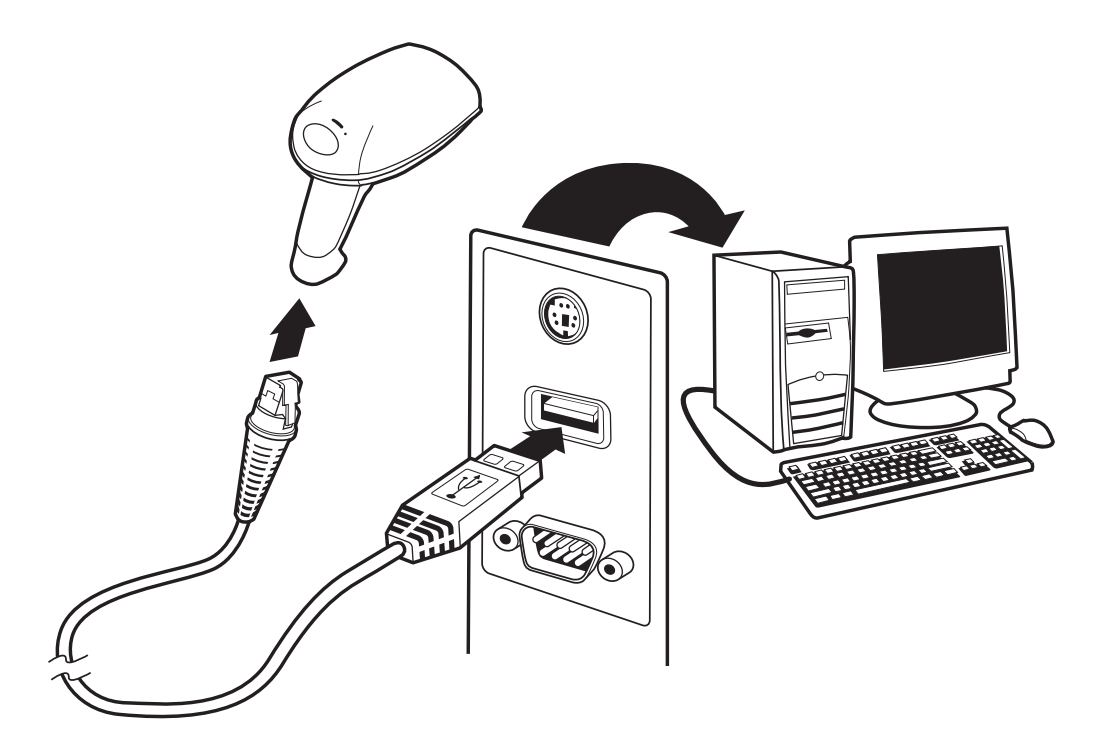


键盘口连接

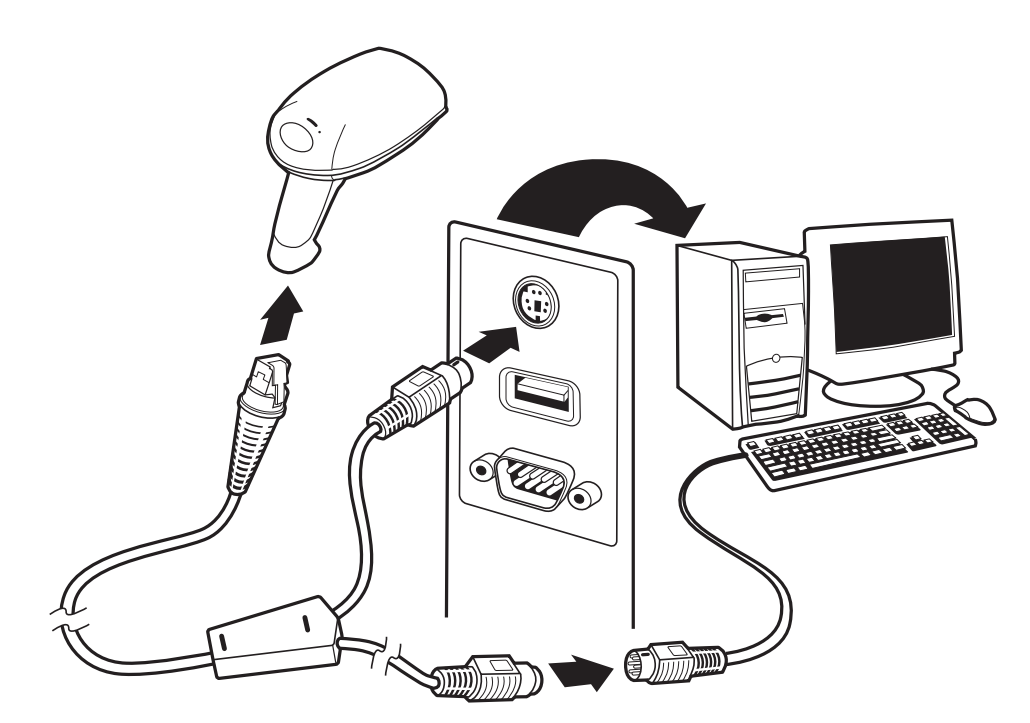

串口 (RS-232) 连接

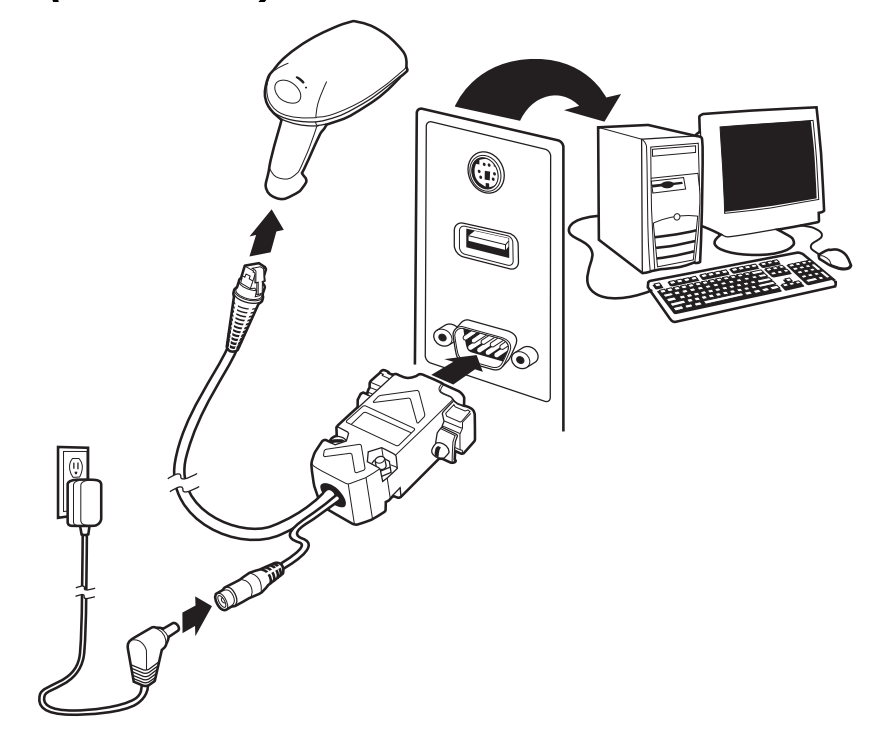

读取技巧

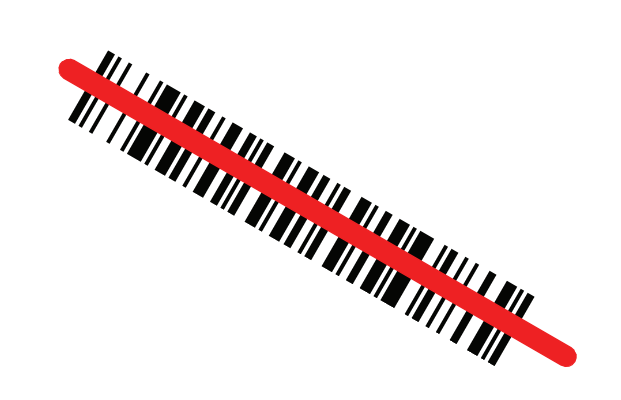


取景器发出的红色瞄准光束应位于条码正中。

将扫描器对准条码，按动触发器，使瞄准光束位于条码的正中。

扫描器越接近条码，瞄准光束越小；扫描器越远离条码，瞄准光束越大。如果条码较小，应使扫描器靠近条码；如果条码较大，扫描器应离条码远一点，这样更容易正确读取条码。

如果条码反射度高（例如，镀膜的），您可能需要以某一角度倾斜扫描器，以便扫描条码。

若要使用支持 PDF 码的 3800 设备读取 PDF417 条码，请保持触发器按下并上下移动扫描器，以便瞄准线可从条码的顶部扫描到底部，再从底部扫描回顶部。

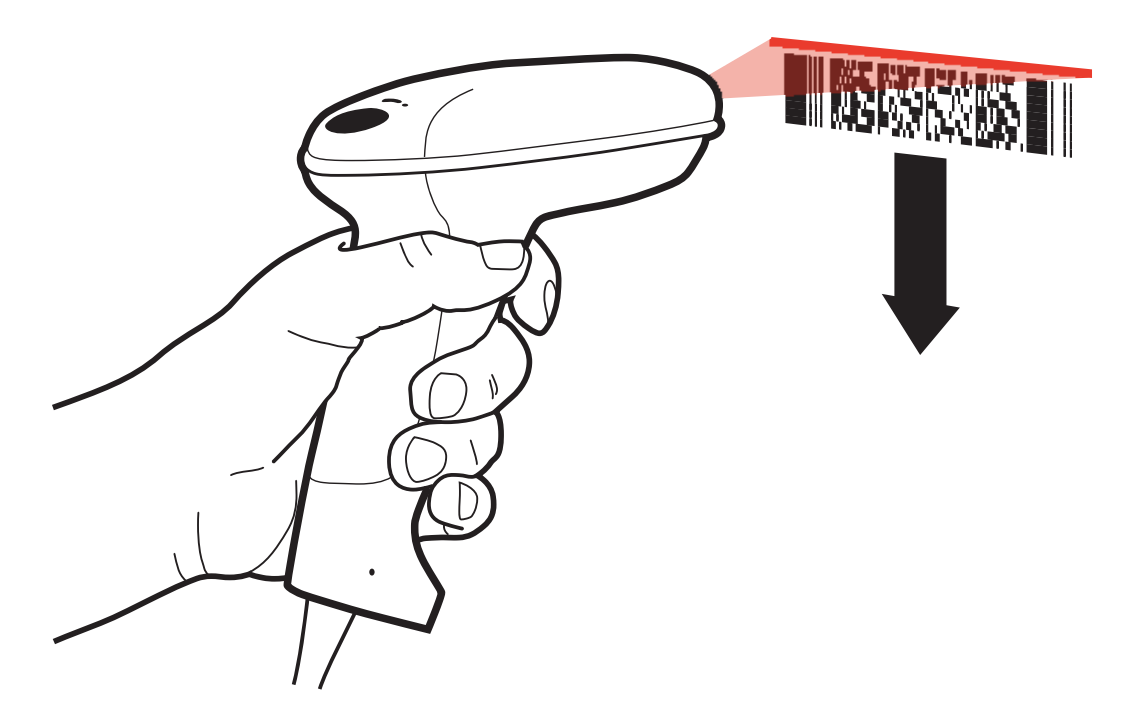

这样可确保完整扫描条码。

附注：此方法只适用于支持 PDF 码的 3800/3800g 设备。

标准产品默认设置

以下条码重置所有标准产品默认设置。



标准产品默认设置

接口

请扫描符合您所使用的 PC 或接口的条码。



USB 键盘 (PC)



RS-232



日本 DOS/V




AT/PS2 键盘口
（默认设置）



仿真外接键盘

键盘的国家 / 地区设置

扫描下面的**键盘的国家 / 地区设置**条码，然后扫描第 10 页中的数字条码，接着扫描**保存**条码，以便对您所在的国家 / 地区的键盘进行设置。原则上，在除美国以外的国家 / 地区，扫描器不支持以下字符：@ | $ # { } [ ] = / ‘ \ < > ~.



键盘的国家 / 地区设置

国家 / 地区代码	扫描	国家 / 地区代码	扫描
比利时	1	意大利	5
丹麦	8	挪威	9
芬兰	2	西班牙	10
法国	3	瑞士	6
德国 / 奥地利	4	美国（默认）	0
英国	7		



保存

附注：有关国家 / 地区代码的完整列表，请参见我们的网站 *www.honeywell.com/aidc* 提供的针对您所购买产品的用户指南。

触发器

以下条码允许您在“手动触发”模式（需要按住触发器进行读取）、“自动触发”模式（光束始终打开）或“感应”模式（读取器在“检测到”条码后激活）下使用读取器。



手动触发
（默认设置）



自动触发



感应模式

重读延迟

此选项设置扫描器第二次读取*同*一条码需要等待的时间。设置重读延迟可防止对同一条码进行意外重读。



中等重读延迟
仅适用于 3800 设备



中等重读延迟
适用于 3800g、 3800r 和 3800i

后缀

如果您希望条码后有一个回车符，请扫描**添加回车符后缀**条码。若要在条码后添加制表符，请扫描**添加制表符后缀**条码。否则，请扫描**删除后缀**条码，以删除后缀。


添加回车符后缀


添加制表符后缀


删除后缀

将条码 ID 前缀添加到所有码制

如果您希望将条码 ID 前缀立即添加到所有码制，请扫描以下条码。


将条码 ID 前缀添加到所有码制

附注：有关条码 ID 的完整列表，请参见我们的网站 *www.honeywell.com/aidc* 提供的针对您所购买产品的用户指南。

数据格式编辑器说明

以下是用于输入数据格式的简单叙述。有关完整指令，请参见我们的网站 *www.honeywell.com/aidc* 上提供的用户指南。

1. 扫描**输入数据格式**符号。
2. 主要 / 替代格式：扫描 **0**，针对主要格式
3. 终端类型：扫描 **099**，针对任何终端类型
4. 条码 ID：扫描 **99**，针对任何条码类型
5. 长度：扫描 **9999**，针对任何长度条码。
6. 编辑器命令：请使用后面的设置图。
7. 扫描**保存**，保存条目。


输入数据格式


清除所有数据格式


保存

设置图



0



1



2



3



4

5



6



7

8


9


A


B

C


D

E


F


保存

Visual Menu

若要对 3800 设备的其他功能进行访问，请使用我们的网站 *www.honeywell.com/aidc* 提供的 Visual Menu。有关 Visual Menu 的完整下载说明和其各项功能的描述，请参见用户指南。



Visual Menu

Visual Xpress™

若要对 3800g、 3800gHD、 3800gPDF、 3800i 或 3800r 设备的其他功能进行访问，请使用我们的网站 *www.honeywell.com/aidc* 提供的 Visual Xpress。有关 Visual Xpress 的完整下载说明和其各项功能的描述，请参见用户指南。

技术协助

如果您在进行安装或故障排除时需要协助，请致电您的经销商或最近的技术支持部门：

北美 / 加拿大

电话：(800) 782-4263
（上午 8 点到下午 6 点，美国东部标准时间）
传真：(315) 554-6705
电子邮件：natechsupport@handheld.com

拉丁美洲

电话：(803) 835-8000
电话：(800) 782-4263
电子邮件：latechsupport@handheld.com

巴西

电话：+55 (21) 3535-9100
传真：+55 (21) 3535-9105
电子邮件：brsuporte@handheld.com

墨西哥

电话：(803) 835-8000
电子邮件：latechsupport@handheld.com

欧洲、中东和非洲

电话：+31 (0) 40 7999 393
传真：+31 (0) 40 2425 672
电子邮件：eurosupport@handheld.com

亚太地区

电话：
电话 - 香港： +852-3188-3485 *或* 2511-3050
电话 - 中国： +86 21 6361 3818
电子邮件：aptechsupport@handheld.com

日本

电话：+813-5770-6312
电子邮件：aptechsupport@handheld.com

馬来西亞

电话：+603-6201-7020
电子邮件：aptechsupport@handheld.com

在线技术协助

您也可以从 www.honeywell.com/aidc 获取在线技术协助。

其他信息

若要下载这些产品的完整用户指南，请访问我们的网站 www.honeywell.com/aidc。

产品服务和维修

Honeywell 通过全球各地的服务中心为其所有产品提供服务。要在保修期内或保修期外获得维修服务，请在返还产品前与下面的相应地点联络，以获取 “ 返还材料授权号 ” (RMA #)。

北美

电话：(800) 782-4263
传真：(803) 835-8012
电子邮件：naservice@handheld.com

拉丁美洲

电话：(803) 835-8000
电话：(800) 782-4263
传真：(239) 263-9689
电子邮件：laservice@handheld.com

巴西

电话：+55 (21) 3535-9100
传真：+55 (21) 3535-9105
电子邮件：brservice@handheld.com

墨西哥

电话：+52 (55) 5203-2100
传真：+52 (55) 5531-3672
电子邮件：mxservice@handheld.com

欧洲、中东和非洲

电话：+31 (0) 40 2901 633
传真：+31 (0) 40 2901 631
电子邮件：euservice@handheld.com

亚太地区

电话：+852-2511-3050
传真：+852-2511-3557
电子邮件：apservice@handheld.com

日本

电话：+813-5770-6312
传真：+813-5770-6313
电子邮件：apservice@handheld.com

在线产品服务和维修协助

您也可以从 www.honeywell.com/aidc 获取在线产品服务和维修协助。

Limited Warranty

Honeywell International Inc. ("Honeywell") warrants its products to be free from defects in materials and workmanship and to conform to Honeywell's published specifications applicable to the products purchased at the time of shipment. This warranty does not cover any Honeywell product which is (i) improperly installed or used; (ii) damaged by accident or negligence, including failure to follow the proper maintenance, service, and cleaning schedule; or (iii) damaged as a result of (A) modification or alteration by the purchaser or other party, (B) excessive voltage or current supplied to or drawn from the interface connections, (C) static electricity or electro-static discharge, (D) operation under conditions beyond the specified operating parameters, or (E) repair or service of the product by anyone other than Honeywell or its authorized representatives.

This warranty shall extend from the time of shipment for the duration published by Honeywell for the product at the time of purchase ("Warranty Period"). Any defective product must be returned (at purchaser's expense) during the Warranty Period to Honeywell factory or authorized service center for inspection. No product will be accepted by Honeywell without a Return Materials Authorization, which may be obtained by contacting Honeywell. In the event that the product is returned to Honeywell or its authorized service center within the Warranty Period and Honeywell determines to its satisfaction that the product is defective due to defects in materials or workmanship, Honeywell, at its sole option, will either repair or replace the product without charge, except for return shipping to Honeywell.

EXCEPT AS MAY BE OTHERWISE PROVIDED BY APPLICABLE LAW, THE FOREGOING WARRANTY IS IN LIEU OF ALL OTHER COVENANTS OR WARRANTIES, EITHER EXPRESSED OR IMPLIED, ORAL OR WRITTEN, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

HONEYWELL'S RESPONSIBILITY AND PURCHASER'S EXCLUSIVE REMEDY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT OF THE DEFECTIVE PRODUCT WITH NEW OR REFURBISHED PARTS. IN NO EVENT SHALL HONEYWELL BE LIABLE FOR INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, AND, IN NO EVENT, SHALL ANY LIABILITY OF HONEYWELL ARISING IN CONNECTION WITH ANY PRODUCT SOLD HEREUNDER (WHETHER SUCH LIABILITY ARISES FROM A CLAIM BASED ON CONTRACT, WARRANTY, TORT, OR OTHERWISE) EXCEED THE ACTUAL AMOUNT PAID TO HONEYWELL FOR THE PRODUCT. THESE

LIMITATIONS ON LIABILITY SHALL REMAIN IN FULL FORCE AND EFFECT EVEN WHEN HONEYWELL MAY HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH INJURIES, LOSSES, OR DAMAGES. SOME STATES, PROVINCES, OR COUNTRIES DO NOT ALLOW THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

All provisions of this Limited Warranty are separate and severable, which means that if any provision is held invalid and unenforceable, such determination shall not affect the validity of enforceability of the other provisions hereof. Use of any peripherals not manufactured/sold by Honeywell may result in damage not covered by this warranty. This includes but is not limited to: cables, power supplies, cradles, and docking stations. Honeywell International Inc. extends these warranties only to the first end-users of the products. These warranties are non-transferable.

The duration of the limited warranty for the 3800, 3800g, 3800gHD, 3800gPDF is five (5) years.

The duration of the limited warranty for the 3800i is three (3) years.

Disclaimer

Honeywell International Inc. (“Honeywell”) reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult Honeywell to determine whether any such changes have been made. The information in this publication does not represent a commitment on the part of Honeywell.

Honeywell shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material.

Web Address: www.honeywell.com/aidc

Honeywell
700 Visions Drive
P.O. Box 208
Skaneateles Falls, NY 13153-0208

Linear-02-SC-QS Rev B
6/08